

ECI User Manual

The ECI electronic cigarette is a newly-developed intelligent electronic cigarette combined with all model of electronic cigarettes advantage. The ECI has the functions of LED screen display battery capacity, E-liquid capacity, total number of smoking mouth; The ECI can be arbitrarily set with the number of smoking, the smoking time and the smoking vapor intelligent ; The ECI can not only use 16340 model lithium battery (700 MAH), it also can use 16650 model lithium battery (2100 MAH);The ECI also can also use other market E-cigarette atomizer, such as the 510 model and EGO-T model E-cigarette. The ECI is the toppest intelligent E-cigarette on the market right now!



This kit contains:


- 2 X16340 batteries (700MAH)
- 2XTank Cartridges
- 1XNormal Tank Atomizer
- 1XProtection cover
- 1Xbattery cover
- 1XIntelligent body parts
- 1Xbottle E-liquid (10ML)
- 1X wall charger (16340 and 16650)
- 1X USB charger line
- 1XManual
- 1XGift tin box

A、 General function:


(Note: A button is the black button on the right side of the intelligent body .B button is the black button on both left and right side of the intelligent body)




1. Press A button 3s to boot, showing the cumulative amount of smoking E-liquid, the remaining percentage of E-liquid and the remaining battery capacity. Press A button 3s to shutdown, showing the time;

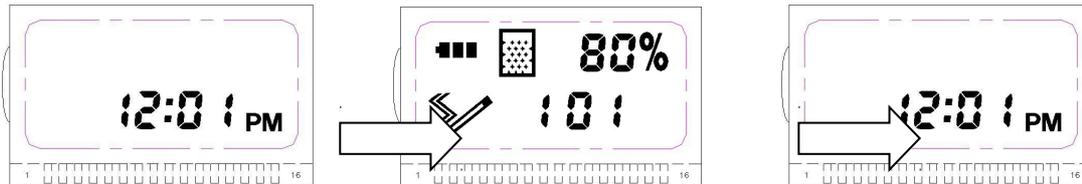


2. Every time smoking, E-liquid would be reduced, the cumulative number of smoking mouth will increase. When the E-liquid is content reduces to 0%, the lampblack symbol of E-liquid will have flash warning;

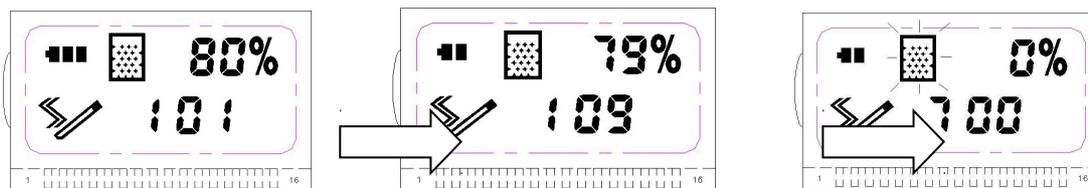


3. Battery symbol cell represents the number of battery power, when battery power is exhausted, the battery symbol will have flashing warning and stop smoking;

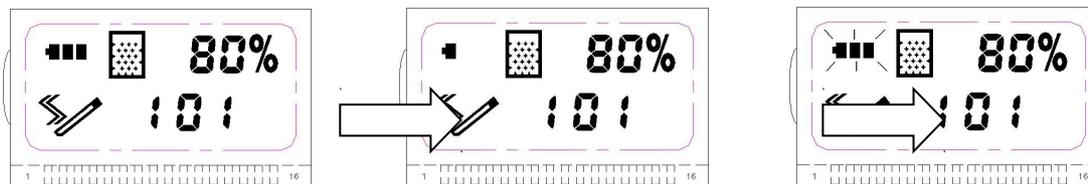

4. In the boot mode, press the B button to enter the "smoking history". Press the B button to view the day before record, press the A button to exit review.

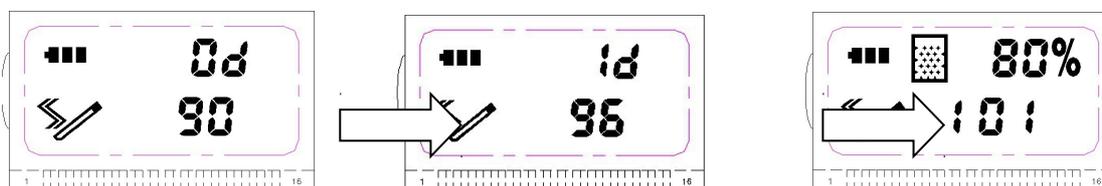

5. In the boot mode, press the B button and A button for 5S at the same time to clear the record of smoking history. "CLr" flashes 2 times back to next.

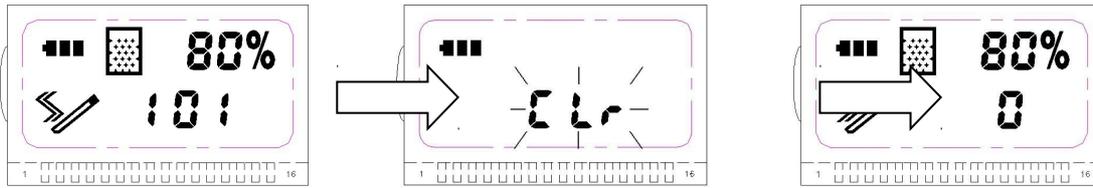

6. Charge function, plug in the USB charger line, screen battery displays charging animation, indicates it is charging. When the battery symbol is in the full grid, indicates charging completed.




7. Each time press the A button shutdown, it will automatically remember all the smoking data and set parameters; In the non-normal shutdown, no memory data.


8. Every time after replace the battery, you need to reset the time.

B. Set Function:


Boot mode, press the B button 3s to enter setup mode. Press A to switch, press the B button to confirm and enter the next set. If select "ON" start the quit smoking function ,select "OFF" close the quit smoking function.; Close the quit smoking function can be unlimited smoking;

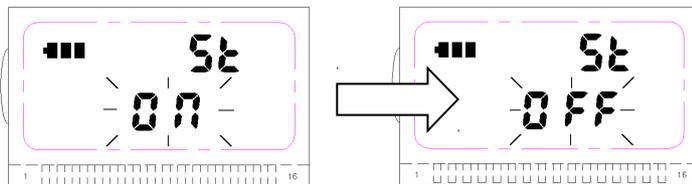


1. Set the period of segregation. Press A button the numerical add 5 minutes, time range from 15 minutes to 120 minutes. Isolation mode, prohibit smoking;

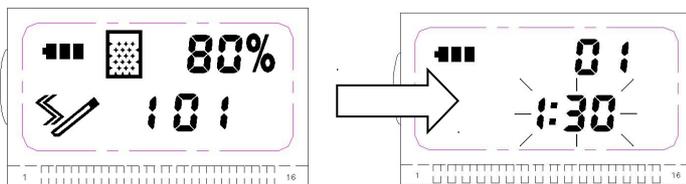

2. Set the number of smoking. Press A button the numerical add 1. The numerical range is from 5 to 30. To the number of smoke into the isolation mode;

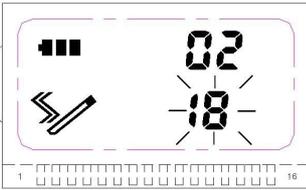


3. Set the smoking time. Press A button the numerical add 1. the numerical range from 5 to 15 minutes. From the first bite of absorb began start time, reach smoking time after entering isolation mode;

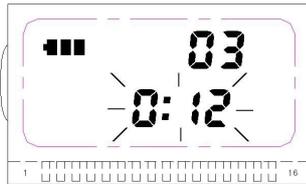


4. Set the hours. Press A button add 1, AM / PM setting automatically followed hour setting and switch;


;

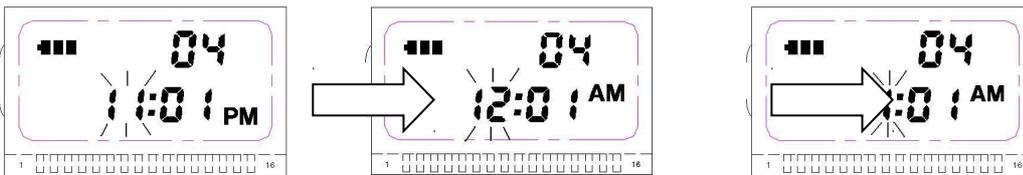

5. Set the Minutes. Press A button add 1;

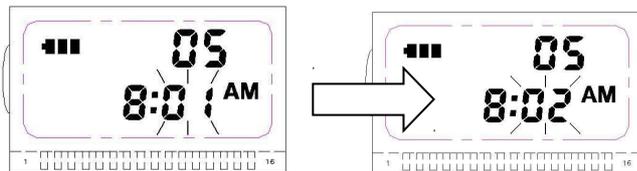

6. Replacement cartridges set. “STA” means there is no replacement cartridges and keep the E-liquid same percentage unchanged. “CHA” means has replaced cartridges, reset E-liquid remaining percentage to 100%. Each time user replace the cartridges, must select “CHA”;

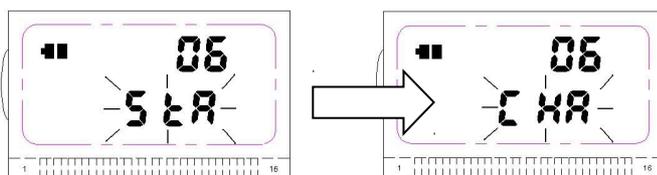

7. Completion replacement cartridges setting press the B button to save settings and exit setup mode, if 30 seconds without operation will no have saving to quit

C、charging

1, The product configuration of the wall charger can charge 16340 model lithium batteries and 16650 model lithium batteries;

2, The ECI product has two kinds charging ways:

(1) Open the USB cover of the intelligent body and then put the USB charger line inserted into the USB interface charging directly (The battery don't taken out).

When f the LED battery symbol of the intelligent body stationary and shows full grid, it means the battery is fully charged.




(2) Normal shutdown, rotate the battery cover, remove the lithium battery, then put the lithium battery inside the wall charger directly to charge. When the charger from the red light turns to green light, it means the battery is fully charged.



D、 How to Using the ECI.

1. Put the lithium battery inside the battery cover first, then rotated the battery cover into the intelligent body. Gently push the Tank cartridges into the atomizer. Finally, put the ECI atomizer rotation into the intelligent body.

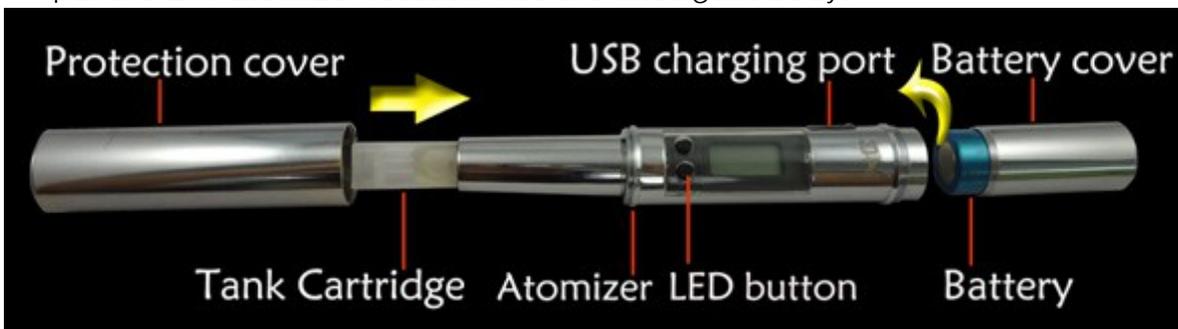

2. Press the A button 3s boot, then press the large LED Silicone button, ECI can begin to work. Press the LED Silicone button and inhale at the same time. Release the button after inhaling. When you press the button, the LED light will turn on. If you

press the LED Silicone button for last 7 seconds, the intelligent body is forced to automatically shut down, not working produce smog. This automatic protection function can protect the product will not cause overheating and damage.

3. There are two holes on the protection cover, the user can put their favorite rope around the neck for using or Used as decorations.

E、 Battery

Always charge the battery fully before using to maintain a good battery life. To ensure a good battery life. Do not store battery in a hot or humid environment. Do not drop battery .Do not force battery. Keep battery away from sharp objects.

F、 Liquid

To prevent excess liquids from building up in the moth piece, clean the overflow prevention cap and the vapor pathway frequently to prevent blockage. Clean excess liquids from around the refill hole before using. If you get excess liquids on your lips, wipe area immediately or wash with water. Do not drink liquids. Use only as instructed. Keep liquids in a safe place away from children or pets. Do not store in a hot place or in direct sunshine. Do not store in a cold place to prevent freezing. Improper storage will cause e-liquid to spoil or lost flavor.




G、 Atomizer

If the atomizer overheats, wait until it returns to a normal temperature before using. If the heating element in the atomizer is dry. It will produce a burning taste. Please ensure there is enough liquid in the tank to prevent heating element from drying.

H、 Refilling liquid

In previous versions of E-cigarette, a tissue was used to drip liquid into the cartridges. The ECI does not need a tissue. Just open the cap, drip liquid into the cartridges and close the cap. The ECI makes refilling easier.

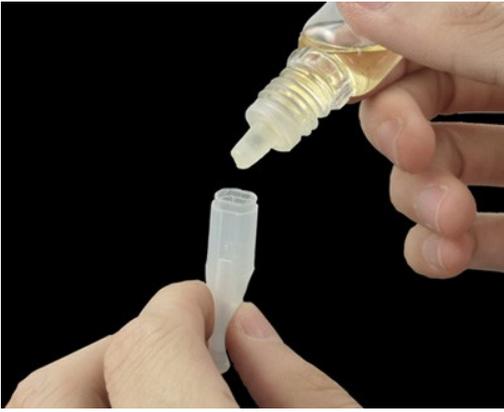

Open the top of the tank cartridges as shown in the picture. Drip liquid into the cartridge until it is full. Close cartridges. Follow directions for assembling the ECI.



I、 Matching products

1 – The ECI product also has a matching products named BGO (the battery capacity is 2100mah and the largest 16650 model lithium battery). ECI can be fully compatible with all accessories of BGO product. Users can put the 16340 lithium batteries into the BGO product use, and also can put the BGO 16650 model lithium batteries into the ECI product to use, The users can use any support of the two models product

2– The ECI also can use other market E-cigarette atomizer and cartridges as well, such as the 510 model , EGO-T model E-cigarette atomizer and cartridges.